
VENUS

Sprayer.

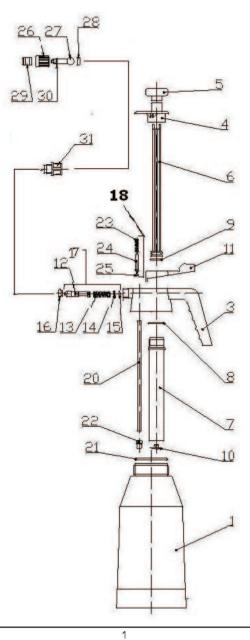

VENUS SPRAYER PART LIST

Dia No	Code	Part Description
1	SPAS-000040-V1	1Venus Tank
3	SPAS-000040-V3	3 Head Body (V 3)
4	SPAS-000040-V4	4 Head Cover (V 4)
5	SPAS-000040-V5	5 Piston Rod Head (V 5)
6	SPAS-000040-V6	6 Piston Rod (V 6)
7	SPAS-000040-V7	7 Pump Body (V 7)
8	SPAS-000040-V8	8 Pump Body O Ring 26 x 2 (V 8)
9	SPAS-000040-V9N	9 N Pump O Ring 18.5 x 2 NBR (V 9N)
9	SPAS-000040-V9V	9 V Pump O Ring 18.5 x 2 Viton (V 9V)
10	SPAS-000040-V10N	10 N Pump Valve Head NBR (V 10N)
10	SPAS-000040-V10V	10 V Pump Valve Head Viton (V 10V)
11	SPAS-000040-V11	11 Shut Off Valve Lever (V 11)
12	SPAS-000040-V12New	12 New Valve Arbor (V 12 New)
12	SPAS-000040-V12Old	12 Old Valve Arbor (V 12 Old)
13	SPAS-000040-V13	13 Spring (V 13)
14	SPAS-000040-V14	14 Special Washer (V 14)
15	SPAS-000040-V15	15 Pump O Ring 4.5 x 1.8 (V 15)
16	SPAS-000040-V16	16 Plug Gasket (V 16)
17	SPAS-000040-V17	Valve Assly (V17)12,13,14,15 Assy
20	SPAS-000040-V20	20 Suction Tube (V 20)
21	SPAS-000040-V21N	21N O Ring 55x 3.5 NBR (V 21N)
21	SPAS-000040-V21V	21V O Ring 55 x 3.5 Viton (V 21V)
22	SPAS-000040-V22	22 Filter (V 22)
23	SPAS-000040-V-23-24-25	23,24,25 Safety Valve Assy (V 23,24,25)
24	SPAS-000040-V24	24 Safetu Valve Pusher (V 24)
25	SPAS-000040-V25	25 O Ring 2.4 x 4.9 (V 25)
26	SPAS-000040-V26	26 Nut (V 26)
27	SPAS-000040-V27	27 Spray Nozzle Core 1 (V 27)
28	SPAS-000040-V28	28 Sealing Washer (V 28)
29	SPAS-000040-V29B	29B Spray Nozzle Nut Brass (V 29B)
29	SPAS-000040-V29P	29P Spray Nozzie Nut PVC (V 29P)
30	SPAS-000040-V30N	30N O Ring 4.9 x 1.9 x Or 4.6 x 2 NBR (V 30N)
30	SPAS-000040-V30V	30V O Ring 4.9 x 1.9 Or 4.6 x 2 Viton (V 30V)
31	SPAS-000040-V31	31 Adaptor (V 31)
	SPAS-000040-VTN	VTN Termite Nozzie (V TN)
	SPAS-000040-EVN	EVN Termite Nozzle (EVN)
	4	+
	-	
	-	
	1	
	7	
	<u> </u>	
	+	
	1	
	1	
	<u> </u>	
		•
	-	