 



WEGWAN

ENGINE

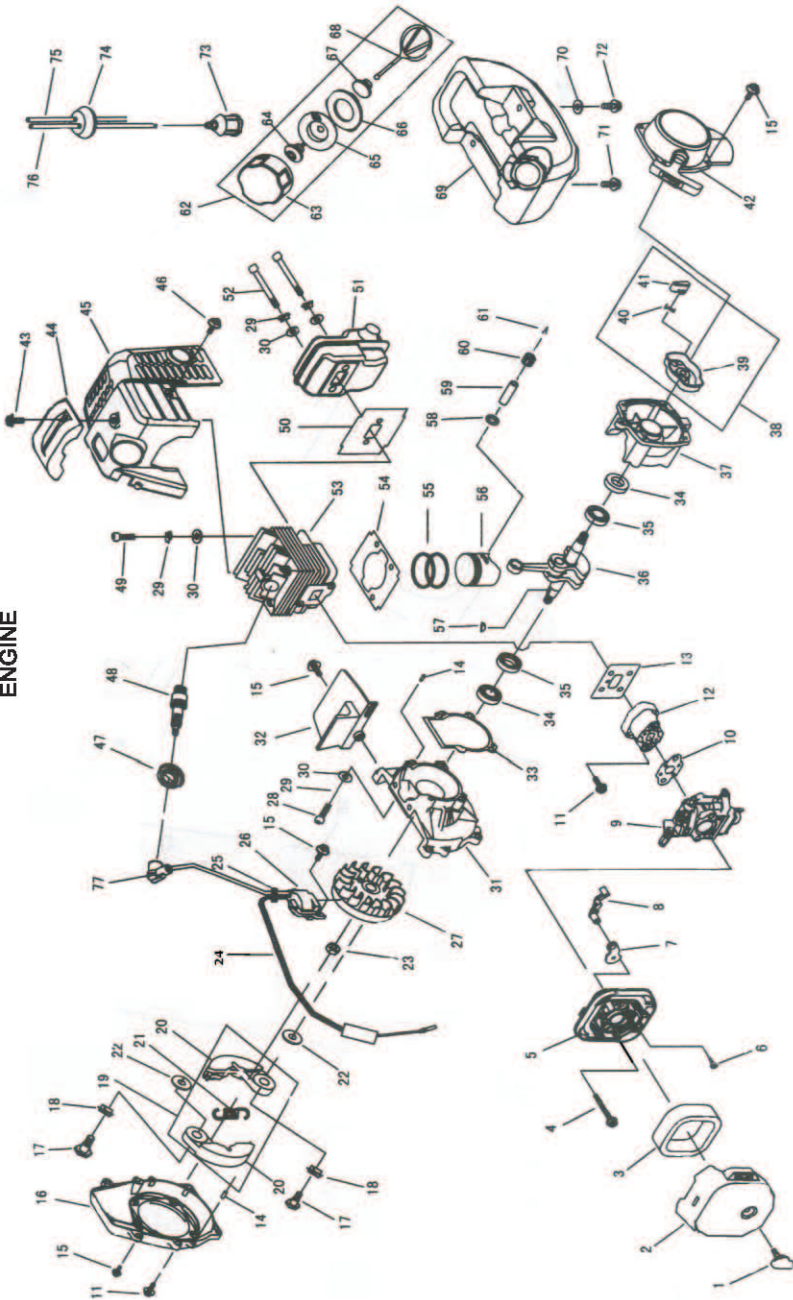


WEGWAN ENGINE SPARE PART LIST

Dia No	Code	Part Description
1	SPAS-001800-13-2011	WG-Screw-1-2011
2	SPAS-001800-13-2011	WG-Cleaner Outside Cover-2-2011
3	SPAS-001800-13-2011	WG-Filter-3-2011
4	SPAS-001800-13-2011	WG-Screw Assy M5X55-4-2011
5	SPAS-001800-13-2011	WG-Cleaner Inside Cover-5-2011
6	SPAS-001800-13-2011	WG-Screw ST4X10-6-2011
7	SPAS-001800-13-2011	WG-Choke-7-2011
8	SPAS-001800-13-2011	WG-Choke Handle-8-2011
9	SPAS-001800-13-2011	WG-Carburetor-9-2011
10	SPAS-001800-13-2011	WG-Gasket, Carburetor Slide-10-2011
11	SPAS-001800-13-2011	WG-Screw Assy M5X20-11-2011
12	SPAS-001800-13-2011	WG-Inlet Manifold-12-2011
13	SPAS-001800-13-2011	WG-Washer, Cylinder Side-13-2011
14	SPAS-001800-13-2011	WG-Pin B3X10-14-2011
15	SPAS-001800-13-2011	WG-Screw Assy M4X16-15-2011
16	SPAS-001800-13-2011	WG-Fan Cover-16-2011
17	SPAS-001800-2011	WG-Clutch Stop Screw-17-2011
18	SPAS-001800-2011	WG-Washer-18-2011
19	SPAS-001800-2011	WG-Clutch Assy-19-2011
20	SPAS-001800-2011	WG-Clutch-20-2011
21	SPAS-001800-2011	WG-Spring, Clutch-21-2011
22	SPAS-001800-2011	WG-Washer 6X15X1-22-2011
23	SPAS-001800-2011	WG-Nut M8X1-23-2011
24	SPAS-001800-2011	WG-Stop Cord Comp.-24-2011
25	SPAS-001800-2011	WG-Primary Cord Grommet-25-2011
26	SPAS-001800-2011	WG-Magneto Stator-26-2011
27	SPAS-001800-2011	WG-Magneto Rotor-27-2011
28	SPAS-001800-2011	WG-Screw M5X25-28-2011
29	SPAS-001800-2011	WG-Washer 5-29-2011
30	SPAS-001800-2011	WG-Washer 5-30-2011
31	SPAS-001800-2011	WG-Front Half Crankcase-31-2011
32	SPAS-001800-2011	WG-Guide Plate-32-2011
33	SPAS-001800-2011	WG-Gasket, Crankcase-33-2011
34	SPAS-001800-2011	WG-Oil Seal 12X22X7-34-2011
35	SPAS-001800-2011	WG-Ball Bearing 6001/P5-35-2011
36	SPAS-001800-2011	WG-Crankshaft Comp.-36-2011
37	SPAS-001800-2011	WG-Rear Half Crankcase-37-2011
38	SPAS-001800-2011	WG-Starter Pully Assy-38-2011
39	SPAS-001800-2011	WG-Starter Pully-39-2011
40	SPAS-001800-2011	WG-Starter Pawl Spring-40-2011
41	SPAS-001800-2011	WG-Starter Pawl-41-2011
42	SPAS-001800-2011	WG-Starter-42-2011
43	SPAS-001800-2011	WG-Screw Assy M5X14-43-2011
44	SPAS-001800-2011	WG-Plug Cover-44-2011
45	SPAS-001800-2011	WG-Cylinder Cover-45-2011
46	SPAS-001800-2011	WG-Screw Assy M4X12-46-2011
47	SPAS-001800-2011	WG-Cover, Plug-47-2011
48	SPAS-001800-2011	WG-Plug-48-2011
49	SPAS-001800-2011	WG-Screw M5X20-49-2011
50	SPAS-001800-2011	WG-Gasket, Muffler-50-2011
51	SPAS-001800-2011	WG-Muffler-51-2011
52	SPAS-001800-2011	WG-Screw M5X55-52-2011
53	SPAS-001800-2011	WG-Cylinder-53-2011
54	SPAS-001800-2011	WG-Gasket, Cylinder-54-2011
55	SPAS-001800-2011	WG-Ring, Piston-55-2011
56	SPAS-001800-2011	WG-Piston-56-2011
57	SPAS-001800-2011	WG-Key-57-2011
58	SPAS-001800-2011	WG-Stop Ring-58-2011
59	SPAS-001800-2011	WG-Pin, Piston-59-2011
60	SPAS-001800-2011	WG-Needle, Bearing-60-2011

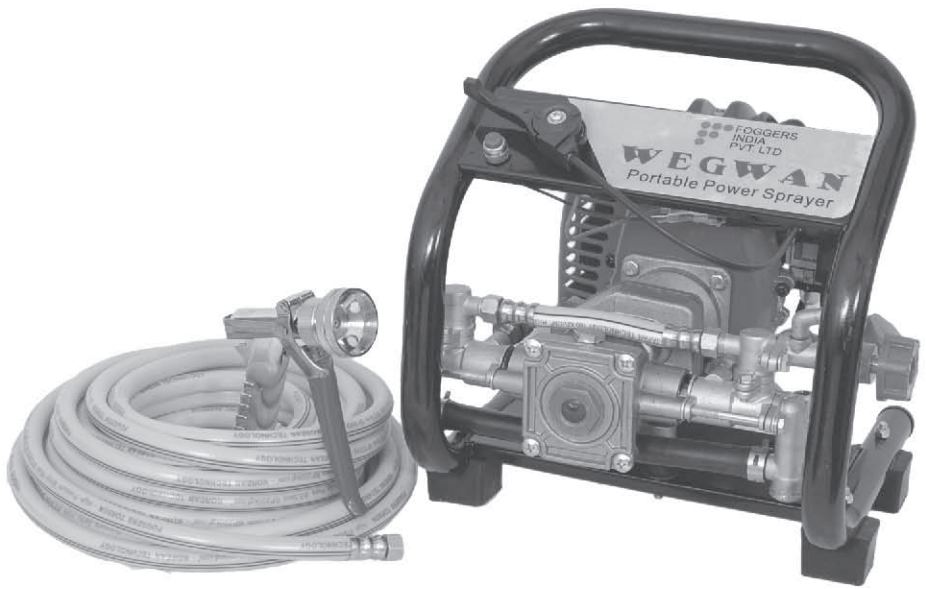 

WEGWAN

 PUMP & FRAME

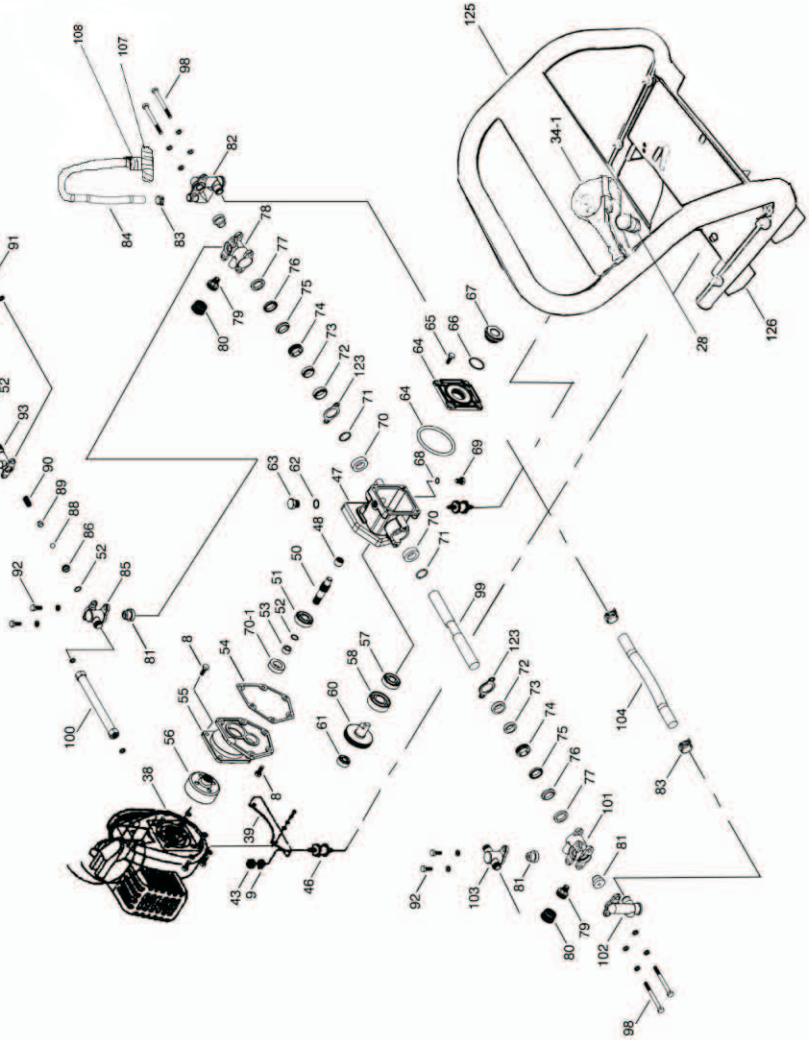

WEGWAN PUMP & FRAME PART LIST

Dia No	Code	Part Description
8	SPAS-001800-8-PUMP-2011	Screw
9	SPAS-001800-9-PUMP-2011	Spring Washer
11	SPAS-001800-11-PUMP-2011	Washer
25	SPAS-001800-25-PUMP-2011	Nylon Nut
31	SPAS-001800-31-PUMP-2011	Screw
34	SPAS-001100-34-BODY-2011	BL-Cable Comp-34-BODY-2011
38	SPAS-001800-38-PUMP-2011	Engine
39	SPAS-001100-39-BODY-2011	BL-Engine Stand-39-BODY-2011
43	SPAS-001800-43-PUMP-2011	nut
46	SPAS-001100-46-BODY-2011	BL-Joint-S-46-BODY-2011
47	SPAS-001100-47-BP-2011	BL-Crank Case-47-BP-2011
48	SPAS-001100-48-BP-2011	BL-Bearing-48-BP-2011
50	SPAS-001100-50-BP-2011	BL-Shaft-50-BP-2011
51	SPAS-001100-51-BP-2011	BL-Bearing-51-BP-2011
52	SPAS-001100-52-BP-2011	BL-O-Ring-52-BP-2011
54	SPAS-001100-54-BP-2011	BL-Gasket-54-BP-2011
55	SPAS-001100-55-BP-2011	BL-Drum Case-55-BP-2011
56	SPAS-001100-56-BP-2011	BL-Drum Clutch-56-BP-2011
57	SPAS-001100-57-BP-2011	BL-Bearing-57-BP-2011
58	SPAS-001100-58-BP-2011	BL-Bearing-58-BP-2011
60	SPAS-001100-60-BP-2011	BL-Gear-60-BP-2011
61	SPAS-001100-61-BP-2011	BL-Bearing-61-BP-2011
62	SPAS-001100-62-BP-2011	BL-O-Ring-62-BP-2011
63	SPAS-001100-63-BP-2011	BL-Oil Inlet Cup-63-BP-2011
64	SPAS-001100-64-BP-2011	BL-Crank Case Cover-64-BP-2011
66	SPAS-001100-66-BP-2011	BL-O-Ring-66-BP-2011
67	SPAS-001100-67-BP-2011	BL-Oil Glass-67-BP-2011
68	SPAS-001100-68-BP-2011	BL-O-Ring-68-BP-2011
69	SPAS-001100-69-BP-2011	BL-Drain Plug-69-BP-2011
70	SPAS-001100-70-BP-2011	BL-Oil Seal-70-BP-2011
71	SPAS-001100-71-BP-2011	BL-O-Ring-71-BP-2011
72	SPAS-001100-72-BP-2011	BL-Adjusting Ring-72-BP-2011
73	SPAS-001100-73-BP-2011	BL-Grease Ring-73-BP-2011
74	SPAS-001100-74-BP-2011	BL-V-Packing Upper Seal-74-BP-2011
75	SPAS-001100-75-BP-2011	BL-V-Packing-75-BP-2011
76	SPAS-001100-76-BP-2011	BL-V-Packing (Fabric)-76-BP-2011
77	SPAS-001100-77-BP-2011	BL-Packing Seat-77-BP-2011
78	SPAS-001100-78-BP-2011	BL-Cylinder-78-BP-2011
81	SPAS-001100-81-BP-2011	BL-Valve Assy-81-BP-2011
82	SPAS-001100-82-BP-2011	BL-Suction Chamber-82-BP-2011
83	SPAS-001800-83-PUMP-2011	Clip-L
84	SPAS-001800-84-PUMP-2011	Suction Hose
85	SPAS-001800-85-PUMP-2011	Outlet Chamber
86	SPAS-001800-86-PUMP-2011	Valve Seat
88	SPAS-001100-88-BP-2011	BL-Pressure Valve-88-BP-2011
89	SPAS-001800-89-PUMP-2011	Pressure Valve Rod
90	SPAS-001100-90-BP-2011	BL-Spring Valve-90-BP-2011
91	SPAS-001100-91-BP-2011	BL-Screw-91-BP-2011
93	SPAS-001100-93-BP-2011	BL-Relief Valve Assy-93-BP-2011
94	SPAS-001100-94-BP-2011	BL-Nut-94-BP-2011
95	SPAS-001100-95-BP-2011	BL-Pressure Valve Screw-95-BP-2011
96	SPAS-001100-96-BP-2011	BL-Pressure Adjusting Knob-96-BP-2011
97	SPAS-001800-97-PUMP-2011	Over Flow Hose
98	SPAS-001800-98-PUMP-2011	Screw
99	SPAS-001100-99-BP-2011	BL-Plunger-99-BP-2011
100	SPAS-001800-100-PUMP-2011	High Pressure Hose
101	SPAS-001100-101-BP-2011	BL-Cylinder-101-BP-2011
102	SPAS-001100-102-BP-2011	BL-Suction Chamber-102-BP-2011
103	SPAS-001100-103-BP-2011	BL-Outlet Chamber-103-BP-2011
104	SPAS-001800-104-PUMP-2011	Suction Hose

